


Assembly Instructions for The Lounger

While utmost care is taken in the choice of materials and the highest standards are used in manufacturing, caring for your chair at home will extend its life and appearance.

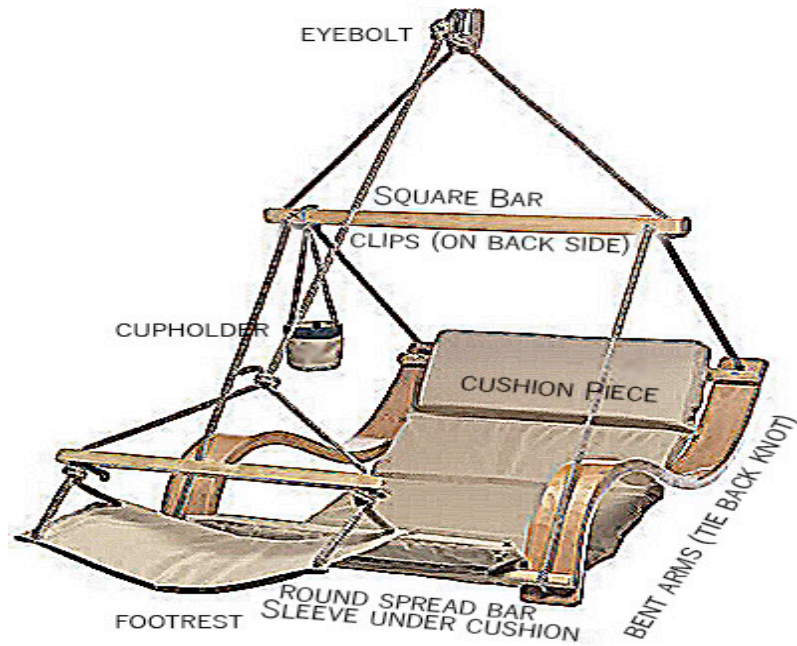

Assembly

Locate all your Lounger Chair parts. Including:

- a) Cushion piece (1)
- b) Footrest (1)
- c) a set of round spreader bars (2)
- d) a set of bent arms attached to overhead square bar via ropes (1)
- e) Hardware pack wrapped inside cup holder (4)

Place wooden bent arms on the ground making sure the arms are face up and that the ropes are not twisted or turned impeding the next step. First insert the rope through the hole on the back of the bent arms and tie a small knot (The brake should be on the back side / if they are on front simply untie the front knot and reverse the clips to the back side).

Place the cushion part of the chair with the tag on the back at top right in between the bent arms on the ground.

- Thread the two round spreader bars through the sleeves underneath the cushion (one sleeve is on top and bottom of the main cushion) .
- Connect the cut away section of the round spreader bars onto the top matching section of the bent wood arms. (Refer to picture to make sure that the bent wood arms are set correctly).
- Using the hardware provided connect the round spreader bars to the bent wooden arms by placing the hex bolt through the spreader bar and bent wood arms from front to back. Bolt down firmly using the washer and nut. Repeat this procedure in all four corners of the chair. Use the wrench to tighten the bolt until it is flush with the front side of the wood.

Installing eyebolt

Locate ceiling joist (use stud finder or tap and verify with small nail). Be sure to locate the exact center. Predrill a starter hole using a 1/4" drill bit. Screw in the supplied eye lag until all that is visible is round section. Do not loosen or adjust once in place. Caution (swinging could loosen the eyebolt and compromise the sturdiness).

Fine-tuning adjustment

Your chair can be adjusted back and forward by manipulating the ropes on the overhead square bar. The brakes must be on the backside of the square bar and must sit tight against the square bar once the recline has been set.

Washing and care instructions

Using a soft brush and warm soapy water, scrub where dirty. Allow to dry hanging or on a flat surface.

Disclaimer

Please note: All agents or reps thereof cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of this product in a manner not expressly intended by the manufacturer. End consumer is ultimately responsible for verifying proper installation of the eye lag/hook assembly according to guidelines explained here within.